

Software Operating Instructions

ELS USB Desktop Reader V7

V1.0 November 2018

table of contents

General information 3
Start the ELS software. 3
ELS Software: Set up ELS USB Desktop Reader V7 4
Start the ELSmobile software (standalone version). 6
ELSmobile software: Set up ELS USB Desktop Reader V7 6

General information


This manual describes the setup of the ELS USB Desktop Reader V7 in the ELS Software and the ELSmobile Software.

Start the ELS software.



Enter name and password and click on [Login].

Note: The first login is done with the name "dom" and the password "4711".
(Please create a new operator after the first start or change the password for the operator DOM.)

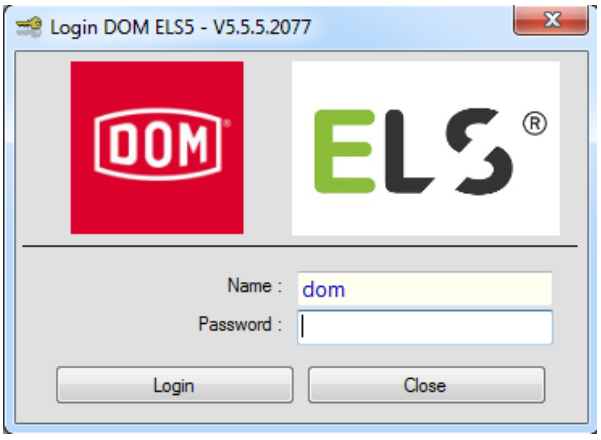


ELS Software: Set up ELS USB Desktop Reader V7

Note: An ELS desktop reader is required to read the master card.


Proceed as follows to create an ELS USB desktop reader V7.

Select the desktop reader - **ELS USB desktop reader V7** - from the list of programming devices and accept the selection by clicking on the **[OK]** button.

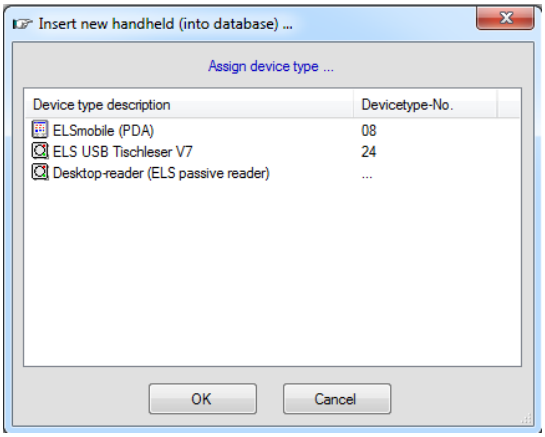


Enter the **serial number** of the desktop reader and accept the selection by clicking the **[OK]** button.


Note: The serial number of the desktop reader can be found on the label on the underside of the desktop reader.

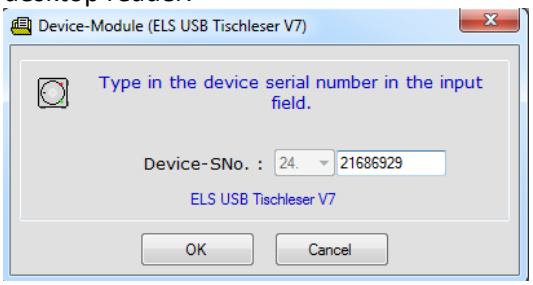


Enter a **description** for the desktop reader and set the status to **Activated**.
Accept the settings by clicking the **[OK]** button.

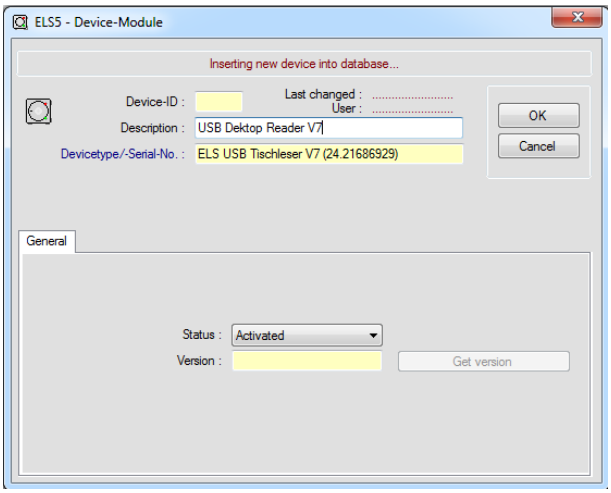

Open the management menu for the ELS USB Desktop Reader V7 again and authenticate the ELS USB Desktop Reader V7 in the tab **Desktop Reader Authentication** by clicking on the button **[Authentication -> ELS USB Desktop Reader V7]**.

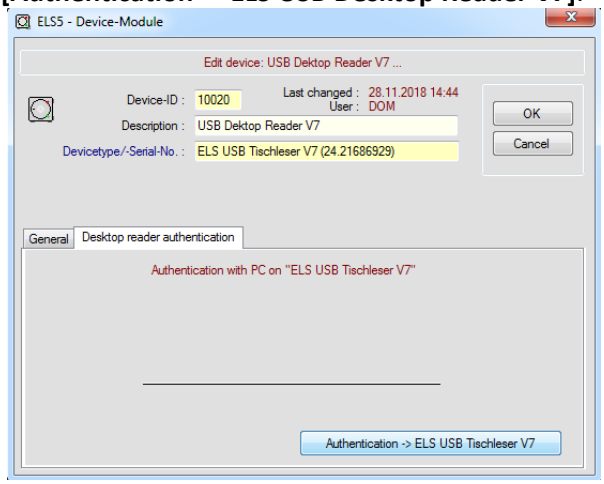

Follow the instructions.
At the end of the authentication process you will receive the message:

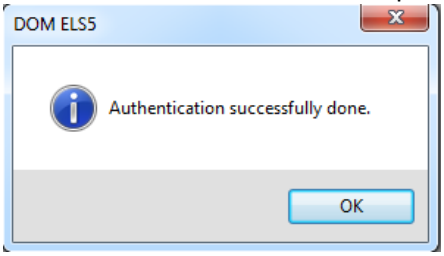

Note: If no communication with the ELS USB Desktop Reader V7 is possible, the authentication can be executed again via the button **[Authentication -> ELS USB Desktop Reader V7]**.

This may be necessary if the ELS software and ELSmobile software are started at the same time and the ELS USB desktop reader V7 is used for both.

Start the ELSmobile software (standalone version).

Start the ELSmobile software by clicking the desktop icon **[ELSmobile Software]**.




Note: If an ELS USB desktop reader V7 is used, it must be connected to the PC before starting the ELSmobile software.


ELSmobile software: Set up ELS USB Desktop Reader V7

Note: The ELS USB Desktop Reader V7 is automatically recognized and authenticated by the ELSmobile software when the software is started.

In the start screen of the ELSmobile software, the recognition and authentication of the ELS USB Desktop Reader V7 is displayed in the status line.

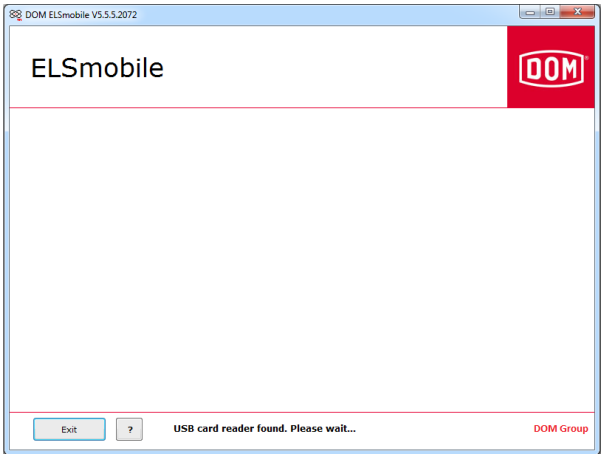


After successful authentication, the function buttons (F8, F9, F10) are enabled.

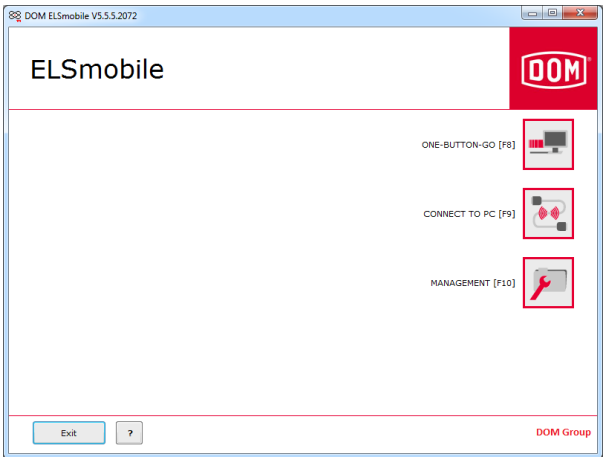

The ELS USB desktop reader V7 is now ready for operation.

In the menu Administration / Settings the ELS USB desktop reader V7 with the serial number is displayed.

The ELS USB desktop reader V7 is ready for operation if the field serial number is highlighted in green.

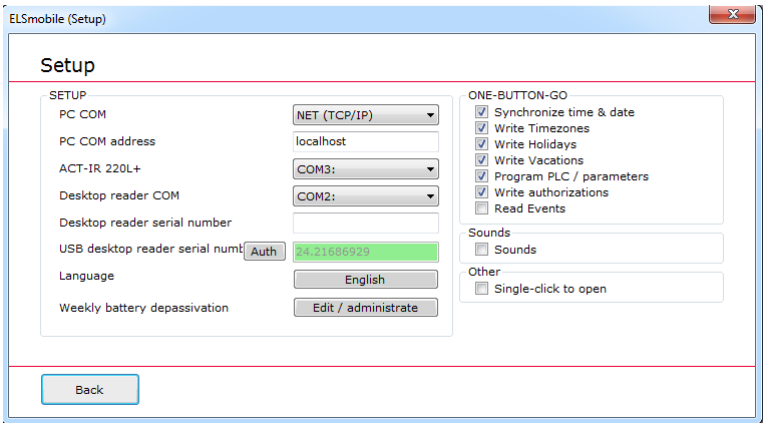

Note: If communication with the ELS USB Desktop Reader V7 is not possible, the authentication can be executed again using the **[Auth]** button.

This may be necessary if the ELSmobile software and ELS software are started at the same time and the ELS USB desktop reader V7 is used for both.